


## T100-Series RADIATOR THERMOSTATS

### PRODUCT DATA

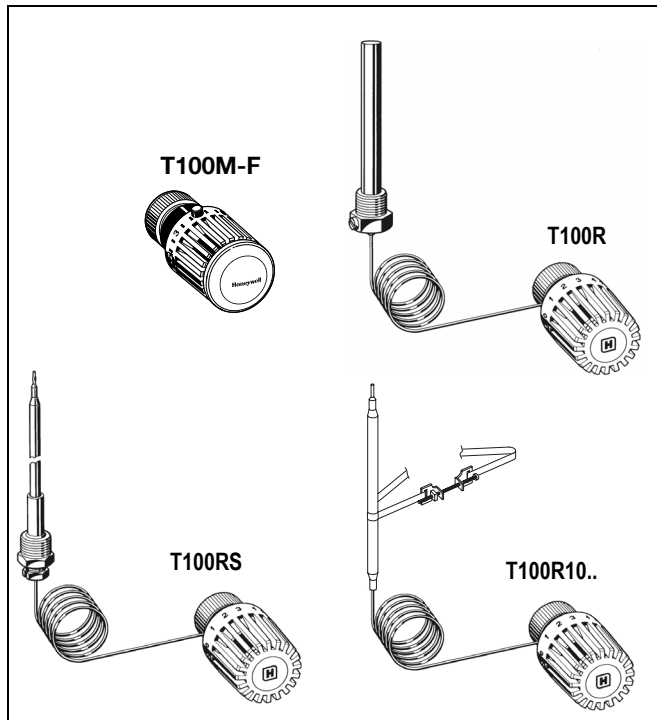

### Application

A Radiator Thermostat is installed onto a Thermostatic Radiator Valve Body (TRV body). The combination of both, the Thermostatic Radiator Valve (TRV), controls the room temperature by adjusting the flow of hot water through a radiator. TRVs are installed in water-based heating systems on the supply or, less commonly on the return connection of radiators. Honeywell radiator thermostats with Honeywell (HW) M30 x 1.5 connection are suitable for all TRV body and radiator inserts with M30 x 1.5 connection and 11.5 mm closing dimension.

### Features

#### For T100M-F

- With internal liquid-filled sensing element
- Red economy button for optimal setting

#### For T100R/RS

- Remote variants
- Liquid-filled sensing element
- T100R with additional immersion pocket for sensor
- Replacement of T100R thermostat can be carried out without draining the system
- T100RS is installed with rapid-response sensor directly immersed in the heating medium
- T100R1004 and T100R1012 with contact sensor and strap length of 3m

### Design

The radiator thermostat consists of:

- External liquid-filled sensor with capillary tube
  - T100R with additional immersion pocket for sensor
  - T100RS with screw-in sensor
  - T100R10.. with contact sensor
- Handwheel with lid and socket
- T100M-F with red economy button
- T100M-F with internal liquid-filled sensing element
- Connection nut standard (T100M-F and T100R )

### Materials

- Handwheel socket and lid made of plastic, white to RAL9016
- Socket made of black plastic (T100R/RS)
- Socket made of white plastic to RAL9016 (T100M-F)
- Economy button made of red plastic (T100M-F)
- Immersion pocket made of nickel-plated brass (T100R/RS)
- Support cage and spindle assembly made of plastic
- Connection nut made of nickel-plated brass

## Specifications

<b>Thermostat connection</b>	M30 x 1.5
<b>Flow temperature</b>	max. 120°C (248°F)
<b>Operating pressure</b>	max. 10bar (145psi)
<b>Differential pressure</b>	max. 1.2bar (17.4psi)
<b>Time constant</b>	10s (T100R) 5s (T100RS)
<b>Capillary tube length</b>	2m
<b>Setpoint range</b>	see table 3
<b>Temperature range</b>	see table 3
<b>Closing dimension</b>	11.5 mm

## Function

### For T100M-F

Radiator thermostats of this type control the TRV body. The air passing around the sensor of the radiator thermostat causes the sensor to expand when the temperature rises. The expanding sensor closes the TRV accordingly. When the room temperature changes the TRV opens or closes proportionally. Only the amount of water required to maintain the room temperature set on the radiator thermostat is allowed to flow through the valve.

### For T100R/RS

Thermostats of this type reliably control the temperature in a hot water generator according to the setting and without external energy source.

The sensor expands or contracts according to the temperature and the movement of the sensor in turn opens or closes the aperture in the valve body through which water flows to the hot water generator.

## Dimensions

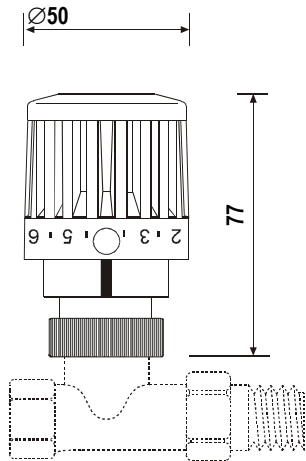


Fig. 1. T100M-F

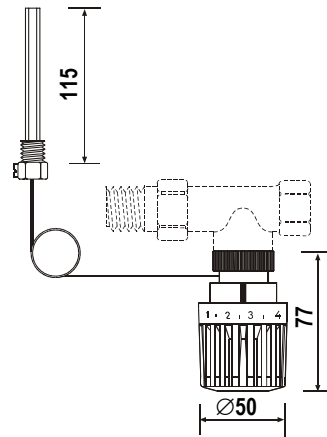


Fig. 2. T100R

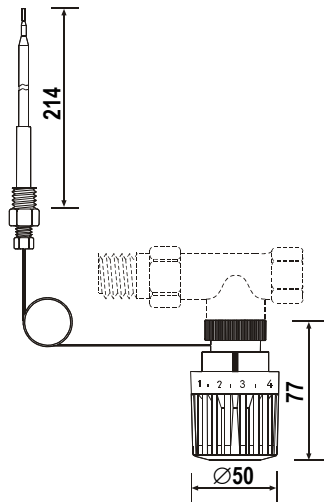


Fig. 3. T100RS

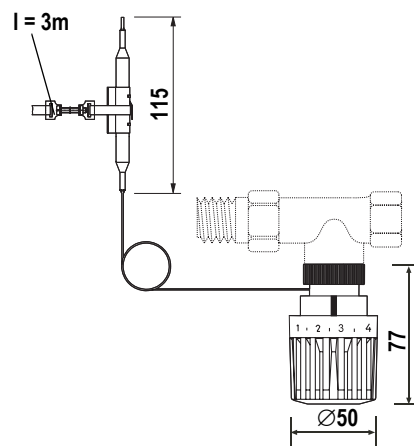


Fig. 4. T100R1004/1012

NOTE: All dimensions in mm unless stated otherwise.

## Ordering Information

Table 1. Available versions and OS-Nos (OS=Ordering Specification)

OS-No.	Remote	Sensor element	Zero-Position	T <sub>min</sub> °C	T <sub>max</sub> °C	R1 1/2" immersion pocket	R1 1/2" screw in sensor	Contact sensor
T100M-264F		liquid		7	27			
T100M-364F		liquid	yes	1	27			
T100R-AA	2m	liquid	yes	10	50	yes		
T100R-AB	2m	liquid		30	70	yes		
T100RS-DA	2m	liquid	yes	10	50		yes	
T100RS-DB	2m	liquid		30	70		yes	
T100R1004	2m	liquid	yes	10	50			yes
T100R1012	2m	liquid		30	70			yes

Table 2. Setpoint and temperature range


OS-No.	Temperature °C (°F)							
	1 (34)	7 (45)	8 (46)	12 (54)	16 (61)	20 (68)	24 (75)	27 (81)
T100M-264F		*	1	2	3	•	5	6
T100M-364F	0	*	1	2	3	•	5	6

OS-No.	Temperature °C (°F)																		
	10 (50)	13 (55)	17 (63)	20 (68)	23 (73)	27 (81)	30 (86)	33 (91)	37 (99)	40 (104)	43 (109)	47 (117)	50 (122)	53 (127)	57 (135)	60 (140)	63 (145)	67 (153)	70 (158)
T100R-AA	0	1	2	3	4	5	6	7	8	9	10	11	12						
T100R-AB							0	1	2	3	4	5	6	7	8	9	10	11	12
T100RS-DA	0	1	2	3	4	5	6	7	8	9	10	11	12						
T100RS-DB							0	1	2	3	4	5	6	7	8	9	10	11	12
T100R1004	0	1	2	3	4	5	6	7	8	9	10	11	12						
T100R1012							0	1	2	3	4	5	6	7	8	9	10	11	12

NOTE: All °C- and °F-values specified at ideal incident flow. This can differ from stated values depending on installation position and air flow.

NOTE: All °C and °F-values approximate. Heating can freeze when radiator thermostats with zero-position are set at position '0'. Zero-position is also thermostatically controlled - when temperature falls the TRV may open.

## Installation Examples

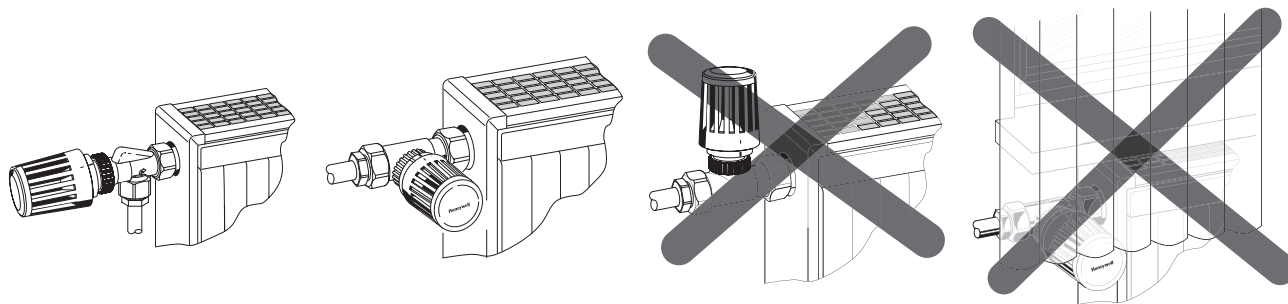

**Fig. 5. Correct and false installation positions for radiator thermostats with internal sensor**

**Please Note:**

- To avoid stone deposit and corrosion the composition of the medium should conform with VDI-Guideline 2035
- Additives have to be suitable for EPDM sealings
- System has to be flushed thoroughly before initial operation with all valves fully open
- Any complaints or costs resulting from non-compliance with above rules will not be accepted by Honeywell
- Please contact us if you should have any special requirements or needs

### Accessories

**Adapter**



DA-Adapter from Danfoss snap connection RA to M30 x 1.5 TA1010DA01

**Adapter**



HZ-Adapter from M28 x 1.5 with 9.5 mm closing dimension to M30 x 1.5 with 11.5 mm closing dimension TA1010HZ01

**Only for T100M-F**

**Special tool for assembly of radiator thermostats**



VA8210A001

**Decoring for connection nut**



white (RAL9016) TA1000A001  
10 pair, 20 pieces

chrome TA1000A002  
10 pair, 20 pieces

**Theft-protection ring, white (RAL9016)**



TA6900A001

Robinex AG  
Alte Distelbergstrasse 1  
5035 Unterentfelden

T +41 62 787 70 00  
F +41 62 787 70 01

info@robinex.ch  
www.robinex.ch